


 Pentrunder® CONCRETE CUTTING SYSTEMS	Cutting depth indicator	Page 1
Unit Pentrunder RS2, Pentpak 3 and RRC	Date 2024-02-05	Rev File, Cutting depth indicator - Short instruction.docx

Cutting Depth indicator

Start using the cutting depth indicator

1. Blade size chosen correctly.
2. Blade is started and rotates at the chosen speed.
3. Feed the blade towards the concrete surface and let go of the joystick just as the blade touches the concrete surface.
4. Flick the Water switch once to set the zero point for the depth indicator.
This can be repeated at any time as long as the blade is rotating to set a new zero point at a new depth.
5. A symbol indicating the cutting depth will now appear in the RRC display.

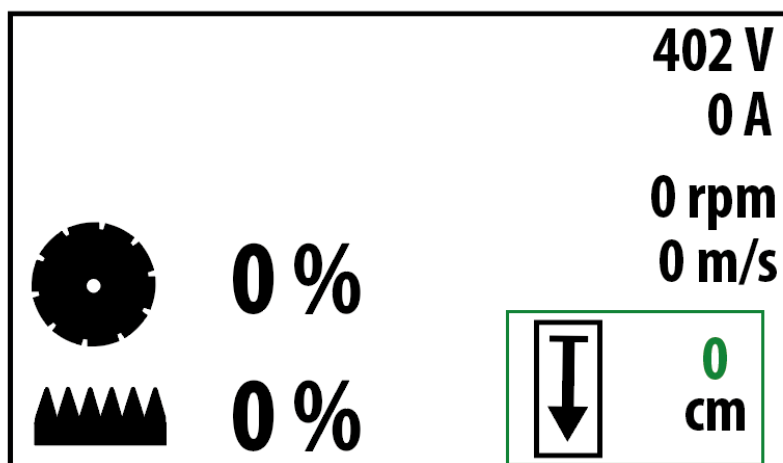

6. Cutting depth will be indicated with a positive number next to the cutting depth symbol.
7. If you move the arm above the zero point, there will be a negative (-) number indicated next to the cutting depth symbol.

Changing to a bigger blade

8. The set zero point will be stored only until the machine is disconnected from the power supply.